



INSTRUCTION Version 1.05(20210714) MANUAL MODEL NPGT

Thin 2-jaw Parallel Gripper



DANGER

- This Instruction Manual has been prepared for intended use for production engineers and maintenance persons who operate this product. When the beginners use this product, be sure to receive the guidance from skilled persons, sales agents, or us in advance.
- Before installing, using, or maintaining this product, read carefully the safety precautions given in this manual so as to understand them completely. If you do not heed given instructions or safety precautions, serious human accidents, death, or physical damage may occur.
- Store this manual with care in the specified place at hand, and reread it as necessary for correct use of the product.
- Please contact the sales agent if you have any uncertainty or doubt about this manual.

Preface

This manual provides detailed information on the thin 2-jaw parallel gripper (model NPGT) so that you can understand its performance and functions and use it safely and correctly. Before using this gripper, read this manual carefully to understand how to use the gripper correctly. Always follow the instructions and warnings given in "Important Safety Precautions" and "Precautions for Use". Failure to follow these precautions could result in serious human accidents.

Terms and Symbols Used for Safety Messages

In this manual, handling precautions that are considered especially important are classified and displayed as shown below according to the degree of risk (seriousness of harm) that could result. Please completely understand the meaning of these terms and follow the instructions for safe operation.



Safety Alert Symbol

This triangle is a safety alert symbol used to alert you to potential safety hazards. To avoid death or injuries that could occur, follow the safety messages given with this safety alert symbol.



Failure to follow the safety precautions below will result in death or serious injuries.



Failure to follow the safety precautions below could result in death or serious injuries.



Failure to follow the safety precautions below may result in minor or moderate injuries.



Indicates instructions which, if you do not heed given instructions, could result in damage to the product or shortened service life, or damage to peripheral equipment.

Disclaimer and How to Use Instruction Manual

This product is suitable for gripping a conveyed workpiece by being installed on the robot or loader. The product is equipped with the jaws to grip the conveyed workpiece and they are operated by air pressure. For any other applications, please contact us.

Kitagawa Corporation shall not be held liable for human accidents, death, damage, or loss that occurred due to a failure to follow the safety precautions given in this manual.

This manual does not predict all potential hazards in operation, inspection, and maintenance under all environmental conditions. There will be an infinite number of matters that cannot or must not be done, and it is impossible for the manual to cover all of them. Therefore, the matters, unless otherwise mentioned clearly as "can be done" or "may be done" in this manual, should be considered as "cannot be done" or "must not be done". Please contact us or our agents if you have an uncertainty about safety when you try to

perform operation, inspection, or maintenance not mentioned in this manual.

Warranty and Disclaimer

The product is warranted for one year after the date of delivery.

All parts used shall be those delivered by Kitagawa Corporation. Kitagawa Corporation shall not be held liable for human accidents, death, damage, or loss that occurred due to the use of parts which are not genuine parts manufactured by Kitagawa. Also, the use of parts other than Kitagawa's genuine parts will void the warranty.


Contents

Structural Drawing and Parts List	4
1-1.Model indication	
1-2.Structural drawing	
1-3.Seal list	
1-4.Parts list	
2. Important Safety Precautions	9
3. Specifications	
3-1. Specification table	
3-2.Gripping force	
4. Use	16
5. Design of Jaws	17
5-1. Designing jaws to be installed on the gripper	
6. Installation	18
6-1.Installing the gripper	
6-2.Installing the jaws	
6-3. Connecting the air piping	
6-4.Installing the switches	
7. Maintenance and Checking	25
7-1.Periodic checking	
7-2.Maintenance interval	
7-3.Grease	
7-4. Disassembly and assembly procedure	
8. Troubleshooting	28
8-1. Problems and countermeasures	
8-2.Contact address in case of trouble	
9. Others	29
9-1. Standards and directives to which the gripper conforms	S
9-2.Disposal of gripper	

1. Structural Drawing and Parts List


1-1. Model indication

The model indication is as follows:

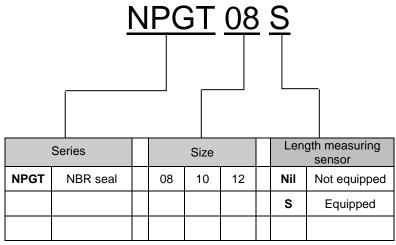

^{*} For the gripper equipped with the length measuring sensor, see also the separately provided instruction manual for it.


1-2. Structural drawing

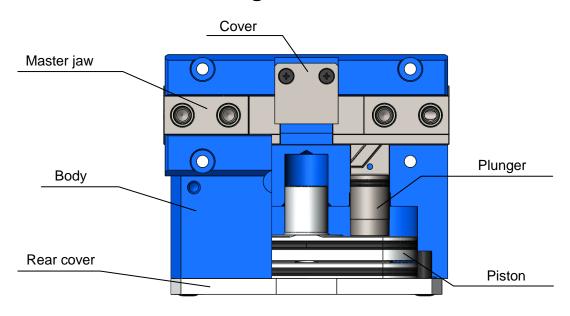


1-3. Seal list

	No.							
Model	202	203	204	205	209	205		
NPGT08	X-ring	X-ring	O-ring	Seal washer	-			
NF G T U O	X013	X136	S55	6S1				
NPGT10	X-ring	X-ring	O-ring	Seal washer	O-ring			
NEGITO	X014	X146	S71	6S1	S11.2			
NPGT10	X-ring	X-ring	O-ring	Seal washer	O-ring	Seal washer		
NEGIIU	X018	X153	S95	10S1	S11.2	5S1		


1-4. Parts list

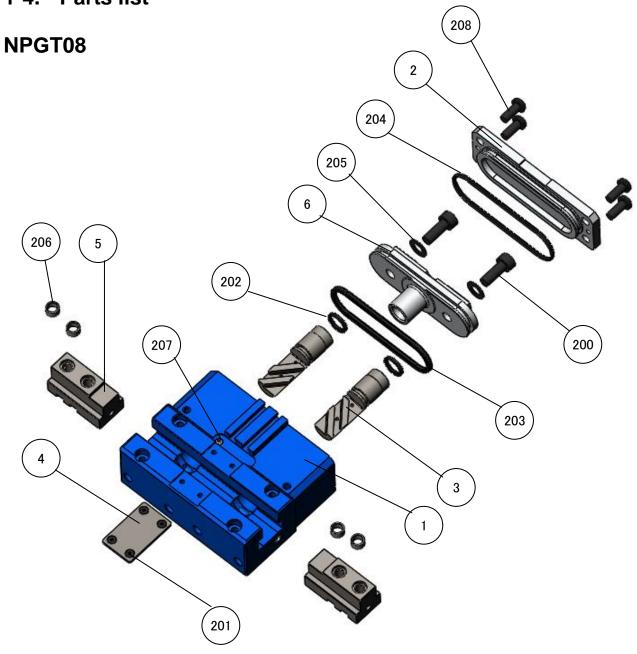

No.	Parts name	Quantity	No.	Parts name	Quantity
1	Body	1	200	Plunger fixing bolt	2
2	Rear cover	1	201	Cover fixing bolt	4
3	Plunger L (R)	1(1)	202	Shaft packing	2
4	Cover	1	203	Piston packing	1
5	Master jaw L (R)	1(1)	204	O-ring	1
6	Piston	1	205	Seal washer	2
			206	Positioning bushing	4
			207	Setscrew	8
			208	Rear cover fixing bolt	4

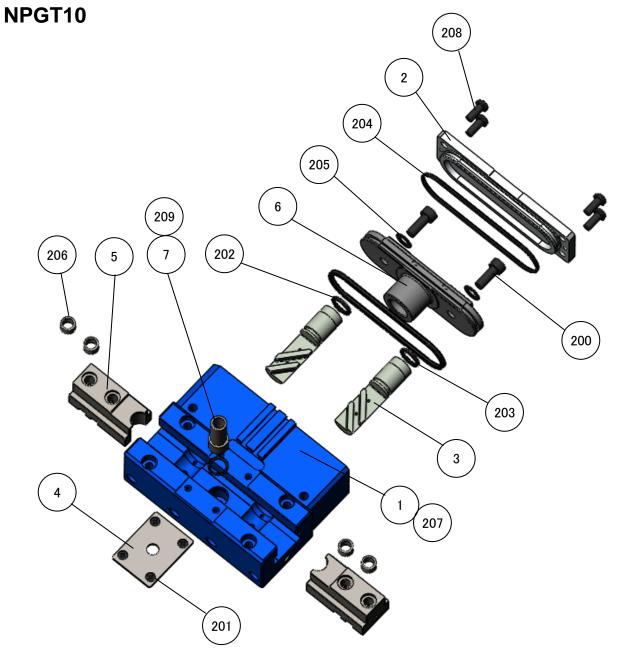

No.	Parts name	Quantity	No.	Parts name	Quantity
1	Body	1	200	Plunger fixing bolt	2
2	Rear cover	1	201	Cover fixing bolt	4
3	Plunger L (R)	1(1)	202	Shaft packing	2
4	Cover	1	203	Piston packing	1
5	Master jaw L (R)	1(1)	204	O-ring	1
6	Piston	1	205	Seal washer	2
7	Pipe	1	206	Positioning bushing	4
			207	Setscrew	8
			208	Rear cover fixing bolt	4
			209	O-ring	1

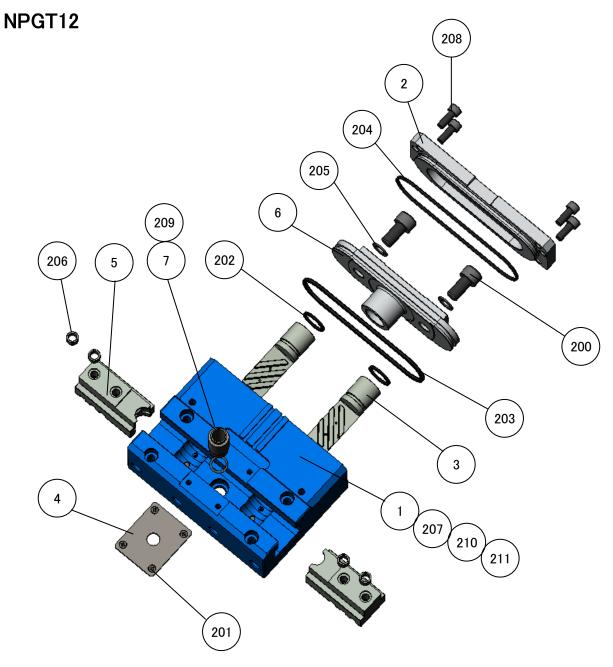

No.	部品名称	個数	No.	部品名称	個数
1	Body	1	202	Shaft packing	2
2	Rear cover	1	203	Piston packing	1
3	Plunger L (R)	1(1)	204	O-ring	1
4	Cover	1	205	Seal washer 10S1	2
5	Master jaw L (R)	1(1)	206	Positioning bushing	4
6	Piston	1	207	Setscrew	5
7	Pipe	1	208	Rear cover fixing bolt	4
			209	O-ring	1
200	Plunger fixing bolt	2	210	Hexagon socket button head screw	2
201	Cover fixing bolt	4	211	Seal washer 5S1	2

2. Important Safety Precautions

Important safety precautions that particularly you should know or follow are summarized below. Please read them before starting to use the product.

A DANGER


Failure to follow the safety precautions below will result in death or serious injuries.



Be sure to turn off the main power supply when installing, checking, oiling, or replacing the gripper.

Also, shut down the air pressure in the work area.

- During work, the robot or gripper could move abruptly and collide with your body.
- After shutting down the air pressure, release the air pressure remaining inside the gripper.

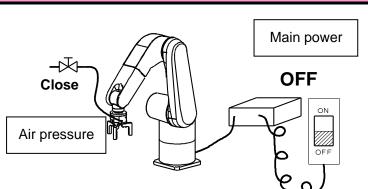




When installing, checking, oiling, or replacing the gripper, post a sign or notice, or provide a fence, and so on to notify people around the machine that work is in progress.

- Notify people around the machine that work is in progress and take measures to keep people other than the operator out of the work area.
 - Machine motion not predicted by a third party could cause serious danger.



Take safety measures so that the operator is not injured even if the conveyed workpiece flies out due to the reduced air pressure.

 Observe the legal safety standards defined by each country, such as installation of safeguards or fall prevention covers.

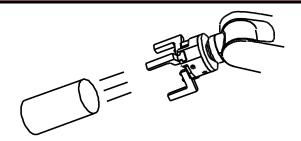




DANGER

Failure to follow the safety precautions below will result in death or serious injuries.



Do not modify the gripper.

 Not only the gripper is damaged but also the gripper and fixed workpiece may fly out.

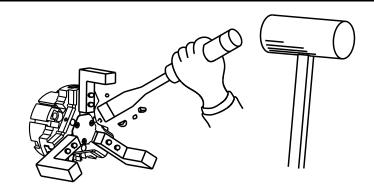



If using the gripper as a workpiece fixture when the workpiece is drilled, deburred, welded, or modified additionally, confirm the specifications.

 If the gripper is used out of the specifications, not only the gripper is damaged but also the fixed workpiece may fly out.



Be sure to tighten the bolts with the specified torque.

- Lack of bolt quantity or tightening torque, or excessive torque could damage the bolt, causing the gripper or conveyed workpiece to fly out.
- When tightening the bolts, fix the gripper so that it will not rotate.
 Failure to do so may result in injury by slipping your hands when tightening the bolts.

Other than plun	ger fixing bolt	Plunger	fixing bolt
-----------------	-----------------	---------	-------------

Bolt			Bolt	Tighte	ening
size			size	tord	lue
М3	1.2	N·m	M5	6.8	N·m
M4	2.7	N·m	M6	12.7	N∙m
M5	5.5	N·m	M8	33.3	N·m
M6	10.8	N·m	M10	72.6	N∙m
M8	26.5	N·m			
M10	60	N·m			

Hexagon socket button head screw

Bolt size	Tightening		
	torque		
M5	4.8	N·m	




Failure to follow the safety precautions below will result in death or serious injuries.



Use the gripper in accordance with the legal safety standards.

 Use the gripper in accordance with the legal safety standards defined by each country, such as installation of safeguards or safety covers.

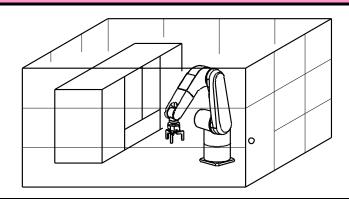




WARNING result in death or serious injuries. Failure to follow the safety precautions below will



Do not operate the machine after drinking alcohol or taking medicine.

Impaired judgment or operation mistake may cause serious hazards.

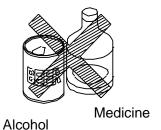



Do not wear clothing or accessories such as a necktie, necklace, etc. which are easy to be caught in.


You may be caught in the gripper.





Use the gripper within the range of specification values.

- When selecting a gripper, select the model by referring to "Model selection" in page 14.
- Have the gripper grip the conveyed workpiece at the position of its center of gravity.
- If not, not only the gripper is damaged but also the conveyed workpiece may fly out.

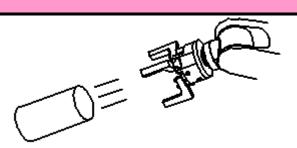

3. Specifications

3-1. Specification table

(Standard gripping force)

Madal		NPGT				
Model		08 (S)	08 (S) 10 (S) 12(S)			
Fluid used			Air pressure			
Operating air pressure	(MPa)		0.2~0.8			
Ambient temperature range	(°C)	5~60				
Jaw stroke in diameter	(mm)	16.6	20.8	26.4		
Cylinder internal volume (cm³)		34	64	152		
Repeatability	(mm)	±0.008				
Body Mass	(kg)	0.79	1.25	2.45		
Ambient humidity range	(%)	30~95				
Storage temperature range	(°C)	-10~60				
Noise level	(dB)		79			

^{*}Noise level is measured at a distance of 1m from the gripper in front, rear, left, and right four positions of the gripper.

3-2. Gripping force

1 Standard for selecting a model

Perform the following calculation and select the model that provides a gripping force exceeding the calculation result, though a gripping force varies depending on the shapes of jaws created by the customer and conveyed workpiece or the friction coefficient.

$F=m(g+a)/\mu$

(Example) When mass of conveyed workpiece and robot acceleration = 10m/s²:

F=8(9.8+10)/0.1=1584(N)

F = Gripping force (N)

m = Mass of conveyed workpiece (kg)

g = Gravitational acceleration (m/s²)


a = Acceleration of robot/loader (m/s²)

 μ = Friction coefficient of gripping part

2Gripping force

External gripping

Internal gripping

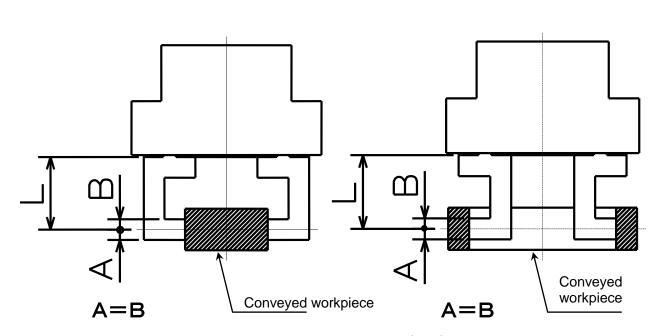



L: Distance up to a grip point(mm)

•Expression of gripping force


A gripping force F shown in graph is actually measured gripping force per jaw F1 x the number of jaws.

$$(F=F1\times2)$$

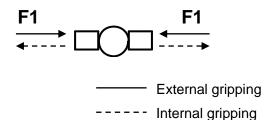

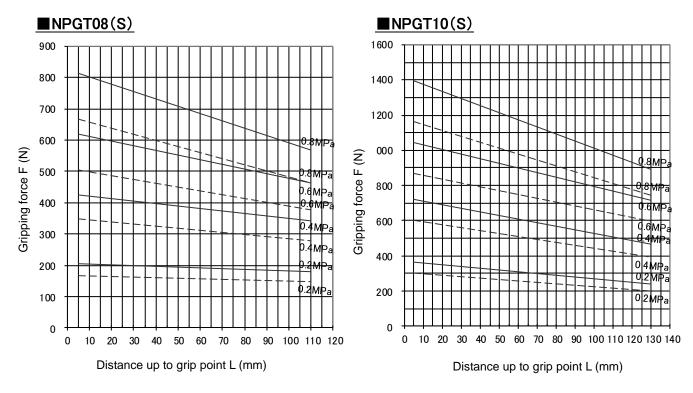

■NPGT08(S)

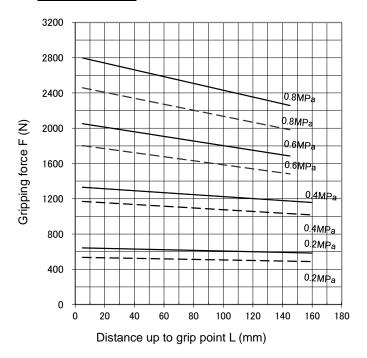

NOTICE


Determine the distance up to a grip point L as short as possible when designing the jaws. Also, the distance up to a grip point L should be used within a range shown in graph. If it is used out of the range, not only the specified gripping force may not be obtained but also the wear of sliding parts may be increased.

4. Use

This product supplies pneumatic pressure to the unit to move the jaws in the open or close direction for gripping the conveyed workpiece and transfers the conveyed workpiece up to any location. After transfer, the jaws are moved in the close or open direction for removing the conveyed workpiece.

A DANGER

 Do not modify the gripper. Using the modified product could cause unexpected accidents. Kitagawa shall not be held liable for human accidents, death, damage, or loss that occurred due to the modification.

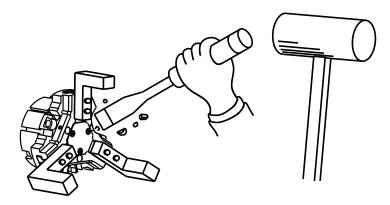

• If using the gripper as a workpiece fixture when the workpiece is drilled, deburred, welded, or modified additionally, confirm the specifications. If the gripper is used out of the specifications, not only the gripper is damaged but also the fixed workpiece may fly out.

WARNING

- Wear appropriate clothing suitable for the work and wear gloves, safety glasses, safety shoes, and helmet.
 - Wearing inappropriate clothing causes the clothing to be stuck, resulting in danger.
 - Appropriate clothing will be preventive measures to prevent hazards due to the carelessness or unexpected accidents during work.


NOTICE

- Do not use the product in the environment of corrosive chemicals, corrosive gas, dust, and vibration, avoiding high temperature or direct sunlight.
- * When storing the product, apply antirust treatment and then store it in a place free from water leakage, dew condensation, or freeze.

5. Design of Jaws

5-1. Designing jaws to be installed on the gripper

When designing jaws to be installed on the gripper, form the installation face to the master jaw as shown below.

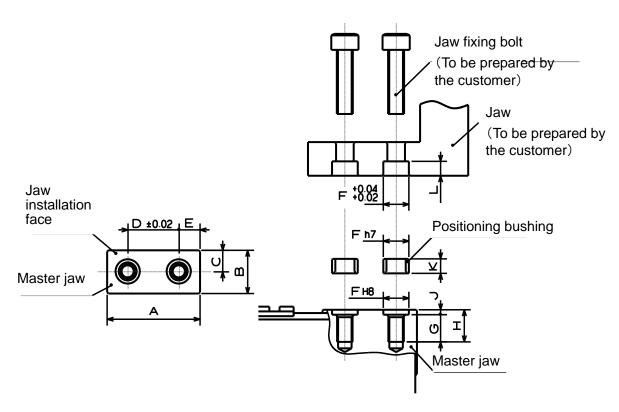

Model	Α	В	С	D	Е	F	G	Н
NPGT 08	29.5	13.5	6.75	16	6.5	φ8	8.5	10
NPGT 10	32.5	18.5	9.25	20	6.5	φ10	10	12
NPGT 12	40	21	10.5	24	8	φ10	13	12

Model	J	K	L	Mounting bolt size
NPGT 08	1.5	4.5	3.5	M5
NPGT 10	2	6	4.5	M6
NPGT 10	2	6	4.5	M6

6. Installation


6-1. Installing the gripper

1 Front face installation

Install the gripper body using the four fixing bolt holes and two positioning pin holes.

The gripper fixing adapter, gripper fixing bolts,

and positioning pins are to be prepared by the customer.

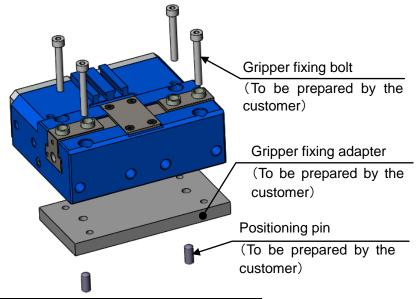

Model		NPGT	08	10	12
Gripper fixing b	olt size		M4	M5	M6
Positioning	Diameter (₀ +0.025)	(mm)	φ5	φ6	φ8
pin hole	Depth	(mm)	8	10	11

2 Rear face installation

Install the gripper body using the four fixing bolt holes and two positioning pin holes.


The gripper fixing adapter, gripper fixing bolts, and positioning pins are to be prepared by the customer.

Fixing bolt

(To be prepared by the customer)

Gripper fixing adapter

(To be prepared by the customer)

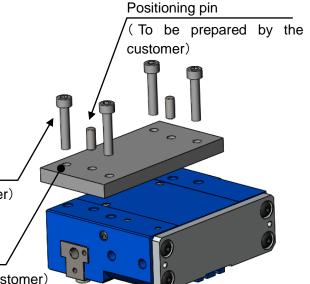


Model		NPGT	08	10	12
Gripper	Size		M5	M6	M8
fixing bolt	Thread depth	(mm)	10	12	12
Positioning	Diameter (0 ^{+0.025})	(mm)	φ5	φ6	φ8
pin hole	Depth	(mm)	8	10	11

3 Side face installation

Install the gripper body using the two fixing bolt holes and two positioning pin holes.

The gripper fixing adapter, gripper fixing bolts, and positioning pins are to be prepared by the customer.

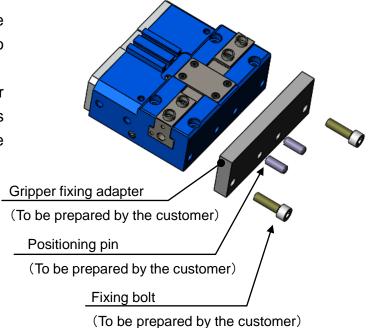

Model		NPGT	08	10	12
Gripper	Size		M6	M8	M10
fixing bolt	Thread depth	(mm)	10	12	15
Positioning	Diameter	(mm)	ϕ 6	φ8	φ10

(mm)


4 Bottom face installation

pin hole

Install the gripper body using the four fixing bolt holes and two positioning pin holes.

Depth

The gripper fixing adapter, gripper fixing bolts, and positioning pins are to be prepared by the customer.

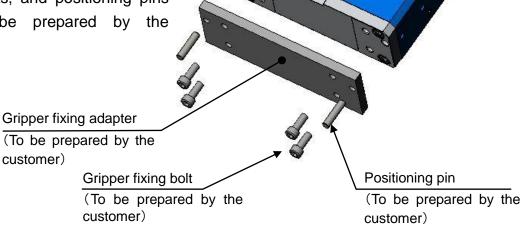

8

10

12

Model		NPGT	12
Gripper	Size		M6
fixing bolt	Thread depth	(mm)	10.5
Positioning	Diameter (0 ^{+0.025})	(mm)	φ8
pin hole	Depth	(mm)	20.5


A DANGER


 Be sure to tighten the bolts with the specified torque. Lack of tightening torque or excessive torque could break the bolts, causing the gripper or conveyed workpiece to fly out.

6-2. Installing the jaws

Install the jaws using the two mounting bolt holes and the supplied positioning bushings.

The jaws and jaw fixing bolts are to be prepared by the customer.

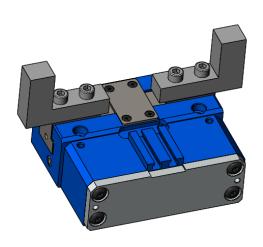

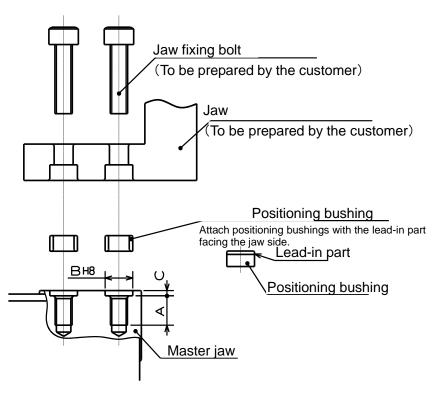

Model		NPGT	08	10	12
Mounting	Size		M5	M6	M6
Bolt	Thread depth	A (mm)	8.5	10	13
Positioning	Diameter (H8)	B (mm)	φ8	φ10	φ10
pin hole	Depth	C (mm)	1.5	2	2

A DANGER

- Be sure to tighten the bolts with the specified torque. Be sure to tighten the bolts with the specified torque. Lack of tightening torque or excessive torque could break the bolts, causing the jaws or conveyed workpiece to fly out.
- Before installing the jaws, disconnect the air piping.

6-3. Connecting the air piping


The air pressure supply ports to open and close the gripper jaws are provided on the side face and rear face of the body.

When using the supply port on the side face of the body, connect the air piping directly.

When using the supply port on the rear face of the body, remove the setscrew, which is attached at the delivery to prevent air leakage, and supply air from the adapter to fix the gripper.

The screws to close the open/close ports on the side face of the body are to be prepared by the customer.

Chips accumulating on the sliding parts of the master jaws can be removed by supplying air pressure from the air purge port on the side face of the body. However, grease is also discharged together at this time, and thus maintenance is required according to application.

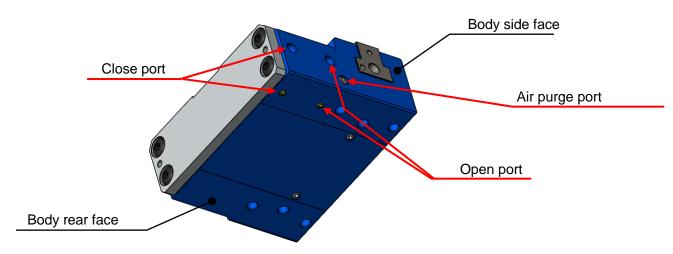

Model NPGT	08	10	12
Port size on body side face	M5	M5	M5
Port size on body rear face	МЗ	МЗ	M5
Air purge port size	M5	M5	M5

NOTICE

- The setscrews in the air pressure supply ports on the body rear face are mounted with adhesive applied to them to prevent air leakage, so it is very difficult to remove them. Therefore, when removing the setscrews, be careful not to damage them.
- After removing the setscrews, take away adhesive fixed to the body screw hole clearly. Be careful not to drip the adhesive into the cylinder.



Be sure to shut off the air pressure before connecting the air piping.

6-4. Installing the switches

Use reed switches of the following models.


	CKD		SM	IC	
	Nonconta	ct 2-wir	e system	Noncontact	2-wire system
Model	F2H	F2V	F2S	D-M9B	D-M9BV
Lead wire pull-out shape	Straight	L-shaped	L-shaped short	Straight	L-shaped

^{*} Using reed switches not shown below may lead to unstable response.

1 Installing the reed switch

Mount reed switches using the grooves on the body.

When using reed switches, design adaptors so that the adaptors will not interfere with

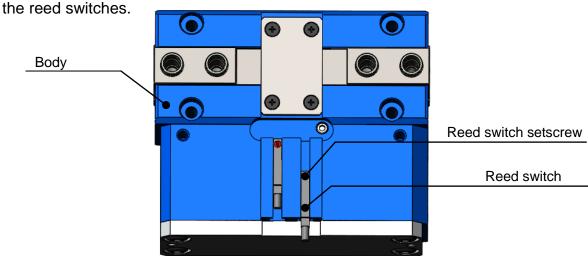


Installation procedure for the close end side

- (1) Move the master jaws to the close end positions, respectively.
- ② Mount a reed switch using the groove on the body.
- 3 Move up and down the reed switch slowly.
- 4 Tighten and fix the setscrew provided on the reed switch at the position where the reed switch detected.
- ⑤ Repeat the opening/closing operation of the master jaws to confirm that the reed switch can detect.

Installation procedure for the open end side

- ① Move the master jaws to the open end positions, respectively.
- 2 Mount a reed switch using the groove on the body.
- 3 Move up and down the reed switch slowly.
- 4 Tighten and fix the setscrew provided on the reed switch at the position where the reed switch detected.
- (5) Repeat the opening/closing operation of the master jaws to confirm that the reed switch can detect.

^{*}In the case of workpiece external gripping, make the above-mentioned adjustment with the workpiece gripped.

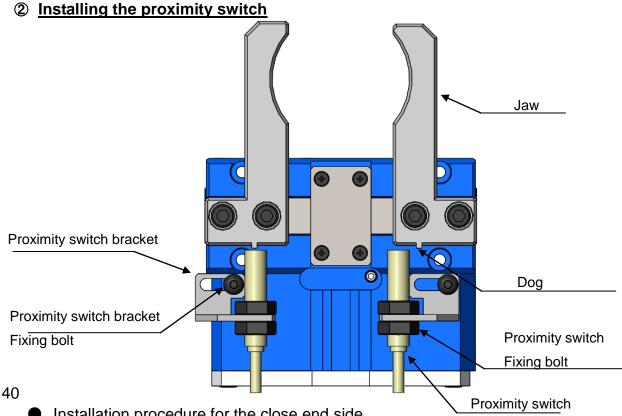

- Installation procedure for the close end side
- 1 Move the master jaws to the close end positions, respectively.
- 2 Install the proximity switch using the proximity switch bracket.
- 3 Provide a dog on each jaw by making use of the jaw shape. Move the proximity switch together with the bracket until it responds, and then fix it using the bolt.
 - * If the proximity switch does not respond, adjust the distance between the proximity switch and the dog.
- 4 Repeat the opening/closing operation of the master jaws to confirm that the proximity switch can detect the dog.

Installation procedure for the open end side

- ① Move the master jaws to the open end positions, respectively.
- 2 Install the proximity switch using the proximity switch bracket.
- 3 Provide a dog on each jaw by making use of the jaw shape. Move the proximity switch together with the bracket until it responds, and then fix it using the bolt.
 - * If the proximity switch does not respond, adjust the distance between the proximity switch and the dog.
- 4 Repeat the opening/closing operation of the master jaws to confirm that the proximity switch can detect the dog.

If chips enter between the proximity switch and the proximity dog, it is recommended to install a proximity switch protection cover.

7. Maintenance and Checking

7-1. Periodic checking

- Before work or at the grease supply, move the jaws over full stroke to check that the stroke mentioned in the specification table is obtained.
- At the end of work, be sure to clean the gripper main body using an air gun.
- At least every three months, check that respective bolts have been tightened.

7-2. Maintenance interval

• The maintenance interval is 1 million cycles, and disassemble the gripper, and clean, replace the seals, apply grease, and reassemble the gripper.

7-3. Grease


1 Grease used

• Be sure to use the specified grease listed below. If unspecified grease is used, adequate effect may not be obtained.

Brand	Manufacturer
Kluberpaste 46 MR 401	Klueber Lubrication: Whole world Whole world
CHUCK GREASE PRO	Kitagawa genuine grease (Kitagawa sales agents in each country)

2 Supplying method

- ① Remove the fine pitch setscrew (M6 x 6 P = 0.75) on the side face of the body. Then attach a grease nipple and supply the grease.
- ② After supplying the grease, move the master jaws several strokes without gripping anything to spread the grease.

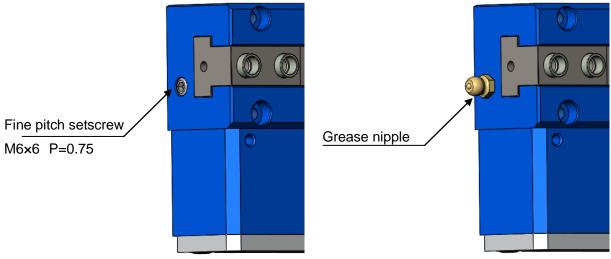

Safety information on grease and antitrust oil

Applicable range

- Specified grease
- Antirust agent applied to the product at the delivery

First-aid treatment

- Aspiration: In case of much aspiration, go to a place where there is fresh air, and cover your body with a blanket to keep your body warm. Consult a doctor if necessary.
- Sticking to your skin: Wipe off the oil, and wash your skin with water and soap. If
 you feel itchy or you get inflamed, consult a doctor
 immediately.
- Entering your eye: Wash your eye with fresh water for at least 15 minutes, and then consult a doctor.
- Accidental drinking: Consult a doctor immediately without vomiting forcibly.
- For the grease other than the specified one and antirust oil prepared by the customer, refer to the safety information prepared for respective oils.

7-4. Disassembly

Disassembly procedure

By referring to the parts list on page 6, disassemble the product through the procedure below:

- ① Stop the air pressure supplied to the gripper and disconnect the air piping.
- 2 Remove the gripper from the robot or the loader.
- ③ Remove the rear cover fixing bolts (No. 208) and the rear cover (No. 2).
- 4 Remove the piston (No. 6) and the plunger (No. 3) together.
- ⑤ Remove the master jaw (No. 5).
- 6 Loosen the cover fixing bolts (No. 201) and remove the cover (No. 4).

Assembly procedure

By referring to the parts list on page 6, assemble the product through the procedure below:

- 1) Insert the master jaw (No. 5) into the body (No. 1).
- ② Insert the piston (No. 6) and the plunger (No. 3) into the body (No. 1). (Align the magnet position on the piston (No. 6) with the sensor groove.) Adjust the engagement between the master jaw (No. 5) and the plunger (No. 3) while changing the position of the master jaw (No. 5).
- 3 Attach the rear cover (No. 2) to the body (No. 1) using the rear cover fixing bolts (No. 208).
- 4 Fix the cover (No.4) using the cover fixing bolts (No.201).
- ⑤ Install the gripper to the robot or the loader.
- 6 Connect the air pressure piping.

To reassemble the gripper, apply the specified grease to the sliding parts and the oil treatment to the seal sliding parts, and perform the reverse procedure of disassembly while checking that the seals do not protrude or fall.

Oil treatment used

Be sure to use the specified oil treatment shown below.

Brand	Manufacturer
S-10 Oil treatment	Napolex: Japan

A DANGER

 Be sure to tighten the bolts with the specified torque. Lack or tightening torque or excessive torque could break the bolts, causing the conveyed workpiece to fly out.

8. Troubleshooting

8-1. Problems and countermeasures

Check the following, and take corrective actions.

Symptom	Cause	Corrective actions
	Gripper internal part is broken.	Replace the gripper with a new one.
ISlideways det seized		Disassemble, and correct the seized part with an oilstone, or replace the gripper with a new one.
Gripper does not		Check that the air pressure is within the operating pressure range.
operate	The piston does not operate.	Check for air leakage.
		Check the piping and solenoid valve, and if normal, disassemble and clean the cylinder.
	The switch is faulty or installed incorrectly.	Check that the switch can detect normally.
Lack of master jaw stroke		Disassemble the gripper, clean it, replace the seals, and apply grease.
	Low air pressure	Check that the air pressure is within the operating pressure range.
Low gripping	Air leaks from the seal.	Disassemble the gripper, clean it, replace the seals, and apply grease.
force Master jaw movements are not		Remove the cover and supply grease, and open and close the master jaws several times without gripping any conveyed workpiece.
		Disassemble the gripper, clean it, and apply grease.

WARNING

- If the gripper failed due to a seizure or damage, disassemble the gripper following the disassembly procedure. If the gripper is in the state that you cannot disassemble, do not disassemble it forcibly but please contact us or our agents.
- Stop using the gripper immediately if the situations are not improved though corrective actions given in above table were taken. Continuous use of faulty product or part could cause serious human accidents due to flying gripper or conveyed workpiece.
- The gripper must be repaired only by skilled persons who have received the training course. Repair by unskilled persons or persons other than us or our agents could cause serious human accidents.

8-2. Contact address in case of trouble

Please get in touch with our sales agent from which you purchased the gripper or our office when the gripper troubled.

9. Others

9-1. Standards and directives to which the gripper conforms

This product conforms to the following standards and directives:

- Machinery Directive: 2006/42/EC Annex I
- EN ISO 12100:2010

9-2. Disposal of gripper

Dispose of this unit in accordance with the laws and regulations of your country.



DECLARATION OF INCORPORATION

of partly completed machinery Copy of original

We hereby declare that the following our product conform with the essential health and safety requirements of the EC Machinery Directive so that the product is to be incorporated into end-machinery. The product must not be put into service until end-machinery has been declared in conformity with the provisions of the EC Machinery Directive 2006/42/EC Annex II part 1.A.

We also declare that the specific technical documentation for this partly completed machinery was drawn up according to the EC Machinery Directive 2006/42/EC Annex VII part B.

Product : Gripper

Model : NTS2 Series, NTS3 Series, NTB Series,

NPGT Series, QG Series

Serial number : See original declaration

Manufacturer : Kitagawa Corporation

77-1, Motomachi, Fuchu-shi, Hiroshima 726-8610, Japan

Authorized compiler in the community

: Peter Soetebier / Prokurist Kitagawa Europe GmbH

Borsigstr.3 D-40880 Ratingen, GERMANY

The essential health and safety requirements in accordance with the EC Machinery Directive 2006/42/EC Annex I were applied and fulfilled: 1.1.2, 1.1.3, 1.1.5, 1.1.6, 1.3.1, 1.3.2, 1.3.4, 1.5.3, 1.5.4, 1.5.8, 1.5.9, 1.6.1, 1.7.1, 1.7.2, 1.7.3, 1.7.4, 1.7.4.1, 1.7.4.2, 1.7.4.3

The following harmonized standards were applied: EN ISO 12100:2010

Signature : See original declaration

Place / Date : See original declaration

Name / Title: Tomonari Hiromoto / Manager, Technical section 1

Technical department

Kitagawa Global hand Company

Being the responsible person appointed and employed the manufacturer.



UK DECLARATION OF INCORPORATION

of partly completed machinery Copy of original

We hereby declare that the following our product conform with the essential health and safety requirements of the Supply of Machinery (Safety) Regulations 2008 so that the product is to be incorporated into end-machinery. The product must not be put into service until end-machinery has been declared in conformity with the provisions of the Supply of Machinery (Safety) Regulations 2008 Annex II part 1.A.

We also declare that the specific technical documentation for this partly completed machinery was drawn up according to the Supply of Machinery (Safety) Regulations 2008 Annex VII part B.

Product : Gripper

Model : NTS2 Series, NTS3 Series, NTB Series,

NPGT Series, QG Series

Serial number : See original declaration

Manufacturer : Kitagawa Corporation

77-1, Motomachi, Fuchu-shi, Hiroshima 726-8610, Japan

Authorized complier

lier : Mark Jones / Financial Director

in the community UNIT 1 THE HEADLANS, DOWNTON,

SALISBURY, WILTSHIRE, SP5 3JJ, UNITED

KINGDOM

The essential health and safety requirements in accordance with the Supply of Machinery (Safety) Regulations 2008 Annex I were applied and fulfilled: 1.1.2, 1.1.3, 1.1.5, 1.1.6, 1.3.1, 1.3.2, 1.3.4, 1.5.3, 1.5.4, 1.5.8, 1.5.9, 1.6.1, 1.7.1, 1.7.2, 1.7.3, 1.7.4, 1.7.4.1, 1.7.4.2, 1.7.4.3

The following harmonized standards were applied: EN ISO 12100:2010, EN 1550:1997+A1: 2008

Signature : See original declaration

Place / Date: See original declaration

Name / Title: Tomonari Hiromoto / Manager, Technical section 1

Technical department

Kitagawa Global hand Company

Being the responsible person appointed and employed the manufacturer.





Kitagawa Corporation **Kitagawa Global hand Company**

77-1, Motomachi, Fuchu-shi, Hiroshima, 726-8610, Japan

Tel. +81-847-40-0561

Fax. +81-847-45-8911

пи-5111,пії о5111111а,7 20-00 го, зарап	Tax. +01-047-40-0301
1-405-1,Kita-ku,Yosino-cho,Saitama-shi,Saitama,331-9634,J <i>f</i> Tel. +81-48-667-3469 Fax. +81-48-663-4678	APAN
4-15-13, Yamatomachi, Wakabayashi-ku, Sendai-shi, Miyagi, 984 Tel. +81-22-232-6732 Fax. +81-22-232-6739	4-0042,Japan
2-62,Kamitakabata,Nakagawa-ku,Nagoya-shi,Aichi,454-0873, Tel. +81-52-363-0371 Fax. +81-52-362-0690	Japan
3-2-9,Kitakagaya,Suminoe-ku,Osaka-shi,Osaka,559-0011,Jap Tel. +81-6-6685-9065 Fax. +81-6-6684-2025	pan
77-1,Motomachi,Fuchu-shi,Hiroshima,726-8610,Japan Tel. +81-847-40-0541 Fax. +81-847-46-1721	
7-6-39,ltazuke,Hakata-ku,Fukuoka-shi,Fukuoka,812-0888,Jap Tel. +81-92-501-2102 Fax. +81-92-501-2103	pan
77-1,Motomachi,Fuchu-shi,Hiroshima,726-8610,Japan Tel. +81-847-40-0526 Fax. +81-847-45-8911	
KITAGAWA-NORTHTECH INC. 301 E. Commerce Dr,Schaumburg,IL. 60173 USA	https://www.kitagawa.us
Tel. +1 847-310-8787 Fax. +1 847-310-9484	
KITAGAWA EUROPE LTD.	https://www.kitagawa.global/en
Unit 1 The Headlands, Downton, Salisbury, Wiltshire SP5 3JJ, L	
Tel. +44 1725-514000 Fax. +44 1725-514001	
KITAGAWA EUROPE GmbH	https://www.kitagawa.global/de
Borsigstrasse 3,40880,Ratingen Germany	
Tel. +49 2102-123-78-00 Fax. +49 2102-123-78-69	
KITAGAWA EUROPE GmbH Poland Office	https://www.kitagawa.global/pl
44-240 Zory,ul. Niepodleglosci 3 Poland	
Tel. +48 607-39-8855	
KITAGAWA EUROPE GmbH Czech Office	https://www.kitagawa.global/cz
Purkynova 125,612 00 Brno,Czech Republic	
Tel. +420 603-856-122 Fax. +420 549-273-246	
KITAGAWA EUROPE GmbH Romania Office	https://www.kitagawa.global/ro
Strada Heliului 15,Bucharest 1,013991,Romania	
Tel. +40 727-770-329	
KITAGAWA EUROPE GmbH Hungary Office	http://www.kitagawa.global/hu
Dery T.u.5,H-9024 Gyor,Hungary	
Tel. +36 30-510-3550	
KITAGAWA INDIA PVT LTD.	https://www.kitagawa.global/in
Plot No 42, 2nd Phase Jigani Industrial Area, Jigani, Bangalo	
	re – 560105, Karnataka, India
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205	re – 560105, Karnataka, India
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch	
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo	
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481	
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai)	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan Tel. +886 2-2393-1221 Fax. +886 2-2395-1231	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China http://www.deamark.com.tw
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan Tel. +886 2-2393-1221 Fax. +886 2-2395-1231 KITAGAWA KOREA AGENT CO., LTD.	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China http://www.deamark.com.tw
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan Tel. +886 2-2393-1221 Fax. +886 2-2395-1231 KITAGAWA KOREA AGENT CO., LTD. 803 Ho,B-Dong,Woolim Lion's Valley,371-28 Gasan-Dong,Gu	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China http://www.deamark.com.tw
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan Tel. +886 2-2393-1221 Fax. +886 2-2395-1231 KITAGAWA KOREA AGENT CO., LTD. 803 Ho,B-Dong,Woolim Lion's Valley,371-28 Gasan-Dong,Gu Tel. +82 2-2026-2222 Fax. +82 2-2026-2113	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China http://www.deamark.com.tw http://www.kitagawa.co.kr
Tel. +91-80-2976-5200 Fax. +91-80-2976-5205 KITAGAWA (THAILAND) CO., LTD. Bangkok Branch 9th FL,Home Place Office Building,283/43 Sukhumvit 55Rd. (Thonglo Tel. +66 2-712-7479 Fax. +66 2-712-7481 Kitagawa Corporation(Shanghai) Room308 3F Building B. Far East International Plaza,No.317 Xian Xia Tel. +86 21-6295-5772 Fax. +86 21-6295-5792 Kitagawa Corporation(Shanghai) Guangzhou Office B07,25/F,West Tower,Yangcheng International Trading Centre,No.122 Tel.+86 20-2885-5276 DEAMARK LIMITED No. 6,Lane 5,Lin Sen North Road,Taipei,Taiwan Tel. +886 2-2393-1221 Fax. +886 2-2395-1231 KITAGAWA KOREA AGENT CO., LTD. 803 Ho,B-Dong,Woolim Lion's Valley,371-28 Gasan-Dong,Gu	r 13),Klongton-Nua,Wattana,Bangkok 10110,Thailand https://www.kitagawa.com.cn/ a Road,Chang Ning,Shanghai,200051,China East Tiyu Road,Tianhe District,Guangzhou,China http://www.deamark.com.tw
	4-15-13, Yamatomachi, Wakabayashi-ku, Sendai-shi, Miyagi, 98-Tel. +81-22-232-6732 Fax. +81-22-232-6739 2-62, Kamitakabata, Nakagawa-ku, Nagoya-shi, Aichi, 454-0873 Tel. +81-52-363-0371 Fax. +81-52-362-0690 3-2-9, Kitakagaya, Suminoe-ku, Osaka-shi, Osaka, 559-0011, Jar Tel. +81-6-6685-9065 Fax. +81-6-6684-2025 77-1, Motomachi, Fuchu-shi, Hiroshima, 726-8610, Japan Tel. +81-847-40-0541 Fax. +81-847-46-1721 7-6-39, Itazuke, Hakata-ku, Fukuoka-shi, Fukuoka, 812-0888, Jar Tel. +81-92-501-2102 Fax. +81-92-501-2103 77-1, Motomachi, Fuchu-shi, Hiroshima, 726-8610, Japan Tel. +81-847-40-0526 Fax. +81-847-45-8911 KITAGAWA-NORTHTECH INC. 301 E. Commerce Dr, Schaumburg, IL. 60173 USA Tel. +1 847-310-8787 Fax. +1 847-310-9484 KITAGAWA EUROPE LTD. Unit 1 The Headlands, Downton, Salisbury, Wiltshire SP5 3JJ, L Tel. +44 1725-514000 Fax. +44 1725-514001 KITAGAWA EUROPE GmbH Borsigstrasse 3,40880, Ratingen Germany Tel. +49 2102-123-78-69 KITAGAWA EUROPE GmbH Poland Office 44-240 Zory, ul. Niepodleglosci 3 Poland Tel. +48 607-39-8855 KITAGAWA EUROPE GmbH Czech Office Purkynova 125,612 00 Brno, Czech Republic Tel. +420 603-856-122 Fax. +420 549-273-246 KITAGAWA EUROPE GmbH Romania Office Strada Heliului 15, Bucharest 1,013991, Romania Tel. +40 727-770-329 KITAGAWA EUROPE GmbH Hungary Office Dery T.u.5,H-9024 Gyor, Hungary Tel. +36 30-510-3550